



## INSTALLATION INSTRUCTIONS

# UNIVERSAL BEAM BLADE

## WIPERS

**FLAT – FRAMELESS  
FOR TRADITIONAL & OEM ARMS**





# UNIVERSAL BEAM BLADE

FLAT – FRAMELESS  
FOR TRADITIONAL & OEM ARMS



Hook 8x3



Hook 9x3 9x4




Side-Pin 4.8mm



Side-Pin 6.4mm



Pin-In 4.8mm

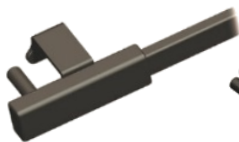

OE-Side Pin  
5x17




OE-Side Pin  
5x22



OE-Push Button  
16mm



OE-Push Button  
19mm

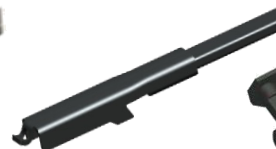

OE-Pinch Tab  
15mm



OE-Side Pin  
Flat End





# Installation Instructions



Bardahl Universal Beam Blade comes with a variety of Adapters to fit Traditional and OEM wiper arms:

| TRADITIONAL WIPER ARMS   |                                                                                                                           |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Wiper Arm Type           | BARD AHL Adapter                                                                                                          |
| Hook 8x3                 | Adapters 1311 + C6-8<br>                 |
| Hook 9x3      9x4        | Adapters 1311 + 2012 (pre-installed)<br> |
| Side Pin 3/16"      1/4" | Adapter D<br>                          |
| Pin-in 3/16"             | Adapters D + PIN<br>                   |

| OEM WIPER ARMS                |                                                                                                                                       |
|-------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| OE Side Pin 5x17      5x22    | Adapter C or 1313<br>                              |
| OE Push Button 16mm      19mm | Adapter B2<br>Wings Unfolded      Wings Folded<br> |
| OE Pinch Tab 15mm             | Adapter B1<br>                                   |
| OE Side Pin 6mm               | Adapter D<br>                                    |



# Installation Instructions



## REVOLUTIONARY CLIP SYSTEM

**Easy Fit  
Super Secure Installation**

### ATTACH

1. Insert the convex into the slot.
2. Press the clip tight to the right and press down the adapter until it snaps into place.



### DE-ATTACH

Press the clip tight to the right, then pull up the adapter from the base.






# Summary of Adapters



**Universal Beam Blade comes with 08 Adapters in total**


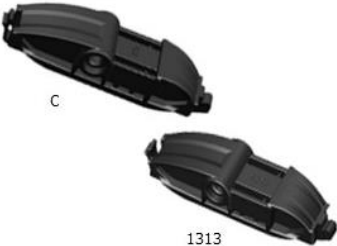
| Adapter 1311                                                                                    | Inner Adapter 2012                                                                 | Adapter C6-8                                                                        | Adapter PIN                                                                          |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|                |   |   |   |
| Adapter C or 1313                                                                               | Adapter B1                                                                         | Adapter B2                                                                          | Adapter D                                                                            |
| <br>C<br>1313 |  |  |  |





# Summary of Adapters

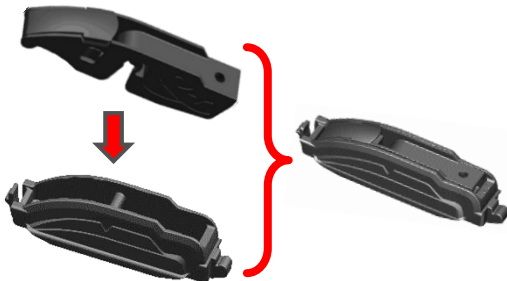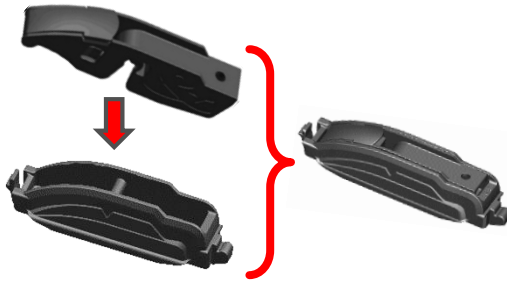


| Adapter 1311                                                                       | NOTE                                                                                                                                               | How it comes in the package                                                                                                                            |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <p>Adapter "1311" holds Inner Adapter "2012"</p>                 | <p>Combo of Adapters "1311+2012" comes pre-installed on wiper</p>   |
| Inner Adapter 2012                                                                 | NOTE                                                                                                                                               | How it comes in the package                                                                                                                            |
|  | <p>Inner Adapter "2012" is pre-installed in adapter "1311"</p>  | <p>Combo of Adapters "2012+1311" comes pre-installed on wiper</p>  |



# Summary of Adapters



## Adapter C6-8

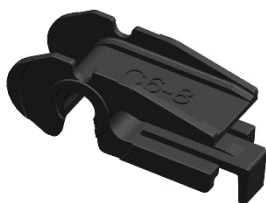

## How it comes in the package

Adapter "C6-8" comes inside the wiper package and is packed in a plastic bag with two other adapters



## Adapter PIN



## How it comes in the package

Adapter "PIN" comes inside the wiper package and is packed in a plastic bag with two other adapters






# Summary of Adapters



## Adapter C or 1313

## How it comes in the package

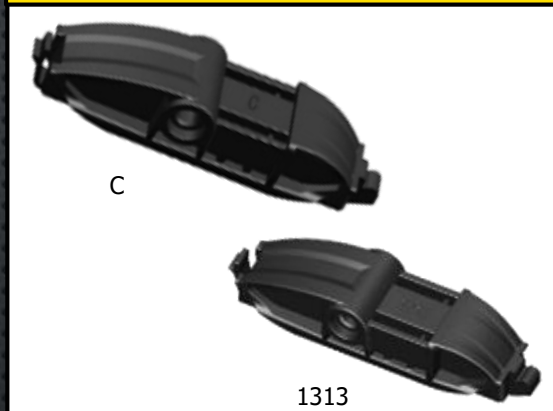

Adapter "C" or "1313" comes inside the wiper package and is packed in a plastic bag with two other adapters



## Adapter B1

## How it comes in the package



Adapter "B1" comes inside the wiper package and is packed in a plastic bag with two other adapters





# Summary of Adapters



| Adapter B2                                                                         | NOTE                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | How it comes in the package                                                                                                                                                                                     |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | <p>Adapter "B2" has WINGS. "B2" is used to install OE-Push Button arms. To install OE-Push Button arm size 19mm: "B2" needs its wings folded. To install OE-Push Button arm size 16mm: need to unfold the "B2" wings, remove and dispose them.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p>Wings folded for<br/>OE-Push Button arm<br/>19mm</p> </div> <div style="text-align: center;">  <p>Wings unfolded for<br/>OE-Push Button arm<br/>16mm</p> </div> </div> | <p>Adapter "B2" comes with WINGS FOLDED inside the wiper package and is packed in a plastic bag with two other adapters</p>  |
| Adapter D                                                                          | How it comes in the package                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                 |
|  | <p>Adapter "D" comes inside the wiper package and is packed in a plastic bag with two other adapters</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                                                                                                                                                                 |



# UNIVERSAL BEAM BLADE

## INSTALLATION TRADITIONAL ARMS



Hook 8x3



Hook 9x3 9x4



Side-Pin 4.8mm



Side-Pin 6.4mm



Pin-In 4.8mm






# UNIVERSAL BEAM BLADE

## Installation Instructions




TRADITIONAL  
ARM TYPE

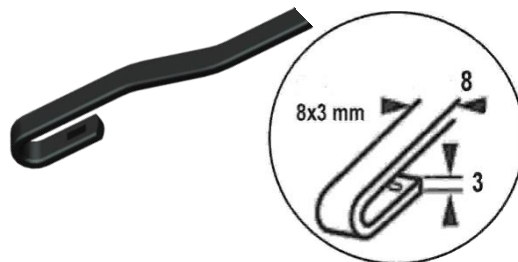

**Hook Arm** 8mm x 3mm

BARDAHL  
ADAPTERS

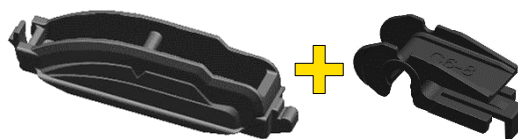


**1311**  
**pre-installed** **C6-8**

Adapter "1311" comes pre-installed on the blade. Adapter "C6-8" comes inside the package of all wiper sizes 11" thru 28"

- 1** Remove pre-installed inner adapter "2012" from adapter "1311"



- 2** Install adapter "C6-8" on adapter "1311". Press down until clicks in position.

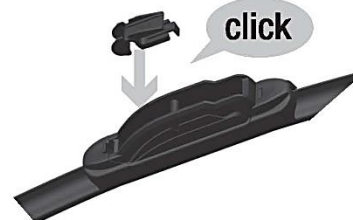

- 3** Install arm & review it is locked in position.



- 4** REMOVE PLASTIC COVER FROM BLADE BEFORE USE






# UNIVERSAL BEAM BLADE

## Installation Instructions



TRADITIONAL  
ARM TYPE

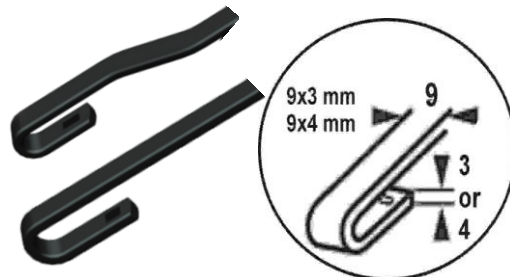

**Hook Arms**

9 x 3mm  
9 x 4mm

BARDAHL  
ADAPTERS



**1311+2012 combo  
pre-installed**

Adapters "1311+2012" combo  
come inside the package of all  
wiper sizes 11" thru 28"

- 1** Adapters "1311+2012" come pre-installed



- 2** Open cover & install Hook Arm  
9mm x 3mm or 9mm x 4mm



- 3** Click in position & close the cover



- 4** Review arm is locked in position



- 5** REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE






# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

TRADITIONAL  
ARM TYPE

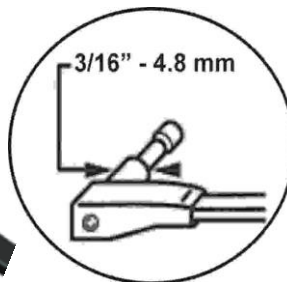

**SMALL  
Side Pin Arm** 3/16" (4.8 mm)

BARDAHL  
ADAPTER



**D**

Adapter "D" comes inside the package  
of all wiper sizes 11" thru 28"

- 1** Remove pre-installed adapters  
"1311+2012" from wiper  
Press the clip tight to the right, then pull  
up the adapter from the base



- 2** Install adapter "D" on the base  
1. Insert the convex into the slot  
2. Press down the adapter until  
it snaps into place






# UNIVERSAL BEAM BLADE

## Installation Instructions



TRADITIONAL  
ARM TYPE

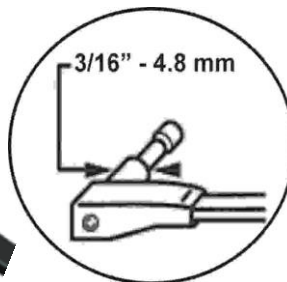

**SMALL**  
**Side Pin Arm** 3/16" (4.8 mm)

BARDHAHL  
ADAPTER




**D**

Adapter "D" comes inside the package  
of all wiper sizes 11" thru 28"

### PART-2 of 2

- 3** Remove the TOP of the adapter "D" pressing side tabs. Install the Side Pin arm using the appropriate hole.

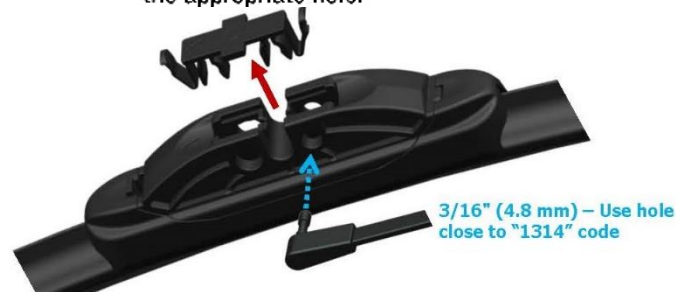

- 4** Reposition the TOP: "ARROWS" need to head the same way. Push down & Click in position. Review arm is locked in position.



- 5** REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE






# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

TRADITIONAL  
ARM TYPE

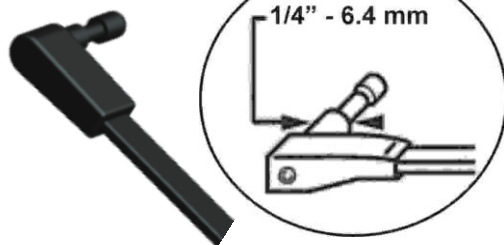

**BIG**  
**Side Pin Arm** 1/4" (6.4 mm)

BARDAHL  
ADAPTER



**D**

Adapter "D" comes inside the package  
of all wiper sizes 11" thru 28"

- 1** Remove pre-installed adapters  
"1311+2012" from wiper  
Press the clip tight to the right, then pull  
up the adapter from the base



- 2** Install adapter "D" on the base  
1. Insert the convex into the slot  
2. Press down the adapter until  
it snaps into place






# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-2 of 2

TRADITIONAL  
ARM TYPE

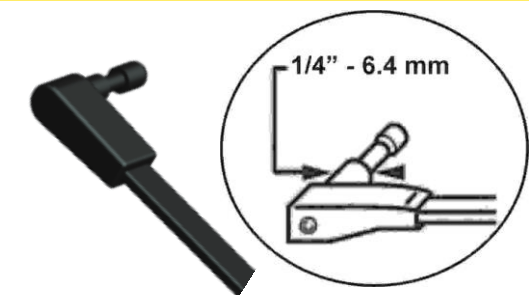

**BIG**  
**Side Pin Arm** 1/4" (6.4 mm)

BARDAHL  
ADAPTER




**D**

Adapter "D" comes inside the package  
of all wiper sizes 11" thru 28"

**3**

Remove the TOP of the adapter "D" pressing  
side tabs. Install the Side Pin arm using  
the appropriate hole.

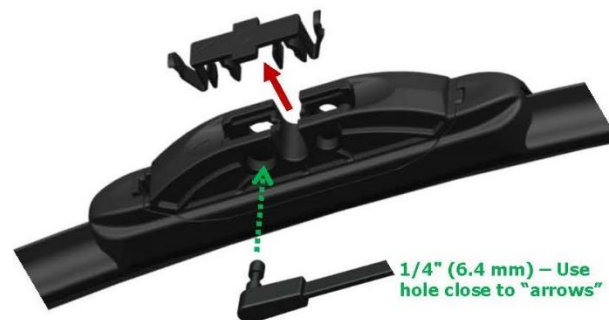

**4**

Reposition the TOP: "ARROWS" need to head  
the same way. Push down & Click in position.  
Review arm is locked in position.



**5**

**REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE**






# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 3: see more steps in next page...


TRADITIONAL  
ARM TYPE

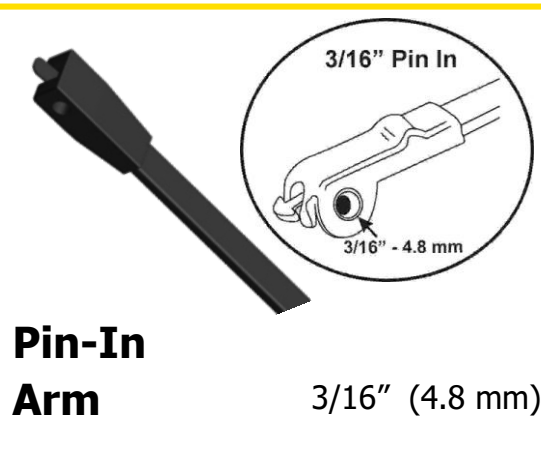

**Pin-In  
Arm**

3/16" (4.8 mm)

BARDAHL  
ADAPTERS

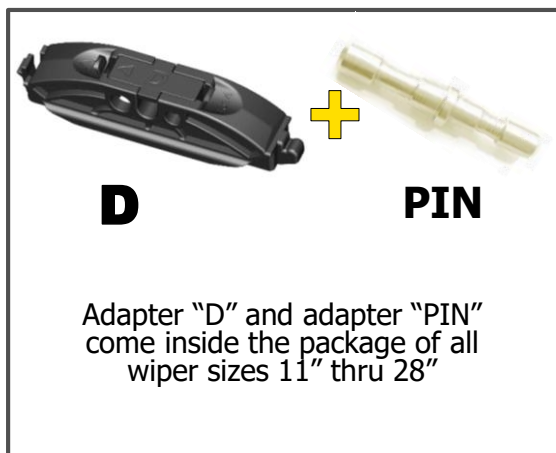

Adapter "D" and adapter "PIN"  
come inside the package of all  
wiper sizes 11" thru 28"

**1**

Remove pre-installed adapters  
"1311+2012" from wiper

Press the clip tight to the right, then pull  
up the adapter from the base



**2**

Install adapter "D" on the base  
1. Insert the convex into the slot  
2. Press down the adapter until  
it snaps into place





# UNIVERSAL BEAM BLADE

## Installation Instructions




### PART-2 of 3: see more steps in next page...

TRADITIONAL  
ARM TYPE



**Pin-In  
Arm**

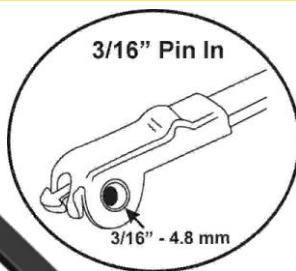

3/16" (4.8 mm)

BARDHAHL  
ADAPTERS



**D**

**PIN**

Adapter "D" and adapter "PIN"  
come inside the package of all  
wiper sizes 11" thru 28"

**3**

Remove the TOP of the adapter "D"  
pressing side tabs.



**4**

Insert the longer side of the PIN in the hole  
close to "1314" code. The inserted PIN  
should reach all the way to the other side



View from other side:



WRONG: The adapter  
PIN is not inserted all  
the way through



CORRECT: The adapter  
PIN is inserted all  
the way through




# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-3 of 3


TRADITIONAL  
ARM TYPE

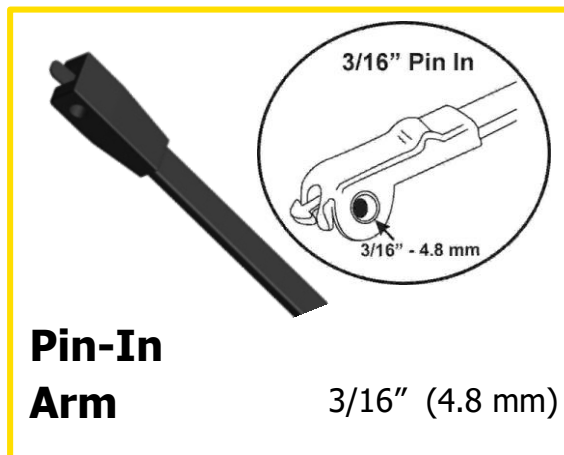

**Pin-In  
Arm**

3/16" (4.8 mm)

BARDHAHL  
ADAPTERS

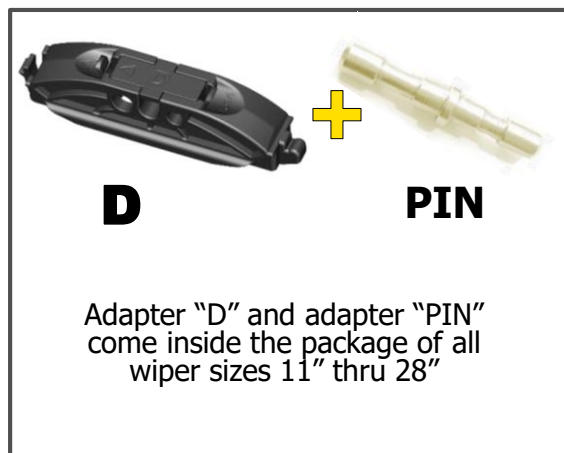

**D**

**PIN**


Adapter "D" and adapter "PIN"  
come inside the package of all  
wiper sizes 11" thru 28"

**5**

Reposition the TOP: "ARROWS" need to head the same way. Push down & Click in position. Review pin is secure.

ARROWS need  
to head the  
same way

click

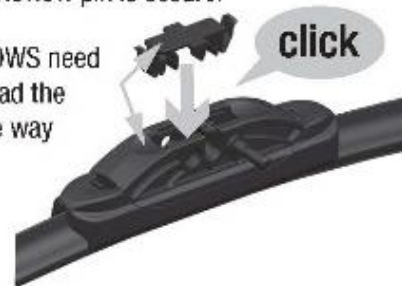

**6**

Install the 3/16" (4.8mm) PIN-IN arm on the PIN adapter. Push & Click in position. Review arm is locked in position.

click



**7**


REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE





# UNIVERSAL BEAM BLADE

## INSTALLATION OEM ARMS

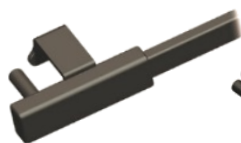

OE-Side Pin  
5x17



OE-Side Pin  
5x22



OE-Push Button  
16mm



OE-Push Button  
19mm



OE-Pinch Tab  
15mm



OE-Side Pin  
Flat End






# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

OEM ARM  
TYPE

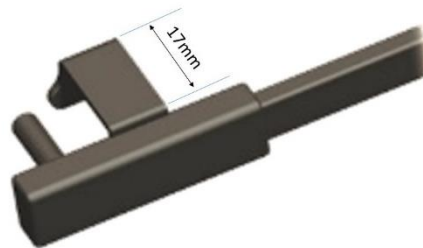

**OE-Side Pin  
Arm**

5x17mm

BARDAHL  
ADAPTER



**"C" or "1313"**

Adapter "C" or "1313" comes inside the package of all wiper sizes 11" thru 28"  
(You can use either adapter "C" or "1313" – they are the same)

**1**

Remove pre-installed adapters "1311+2012"  
Press the clip tight to the right, then pull up the adapter from the base



**2**

Install adapter "C" or "1313" on the base:  
1. Insert the convex into the slot  
2. Press down the adapter until it snaps into place





# UNIVERSAL BEAM BLADE

## Installation Instructions



OEM ARM  
TYPE



**OE-Side Pin  
Arm**

5x17mm

BARDAHL  
ADAPTER



**"C" or "1313"**

Adapter "C" or "1313" comes inside the package of all wiper sizes 11" thru 28"

### PART-2 of 2

- 3** Turn at 90 degree angle and insert pin of the arm into the hole on the adapter. Rotate until arm TAB lays flat on the top of the adapter



- 4** Review arm is locked in position.



- 5** REMOVE PLASTIC COVER FROM BLADE BEFORE USE





# UNIVERSAL BEAM BLADE

## Installation Instructions



**PART-1 of 2: see more steps in next page...**

OEM ARM  
TYPE



**OE-Side Pin  
Arm**

5x22mm

BARDAHL  
ADAPTER



**"C" or "1313"**

Adapter "C" or "1313" comes inside the package of all wiper sizes 11" thru 28"  
(You can use either adapter "C" or "1313" – they are the same)

**1**

Remove pre-installed adapters "1311+2012"  
Press the clip tight to the right, then pull up the adapter from the base



**2**

Install adapter "C" or "1313" on the base:  
1. Insert the convex into the slot  
2. Press down the adapter until it snaps into place





# UNIVERSAL BEAM BLADE


## Installation Instructions



OEM ARM  
TYPE



BARDAHL  
ADAPTER

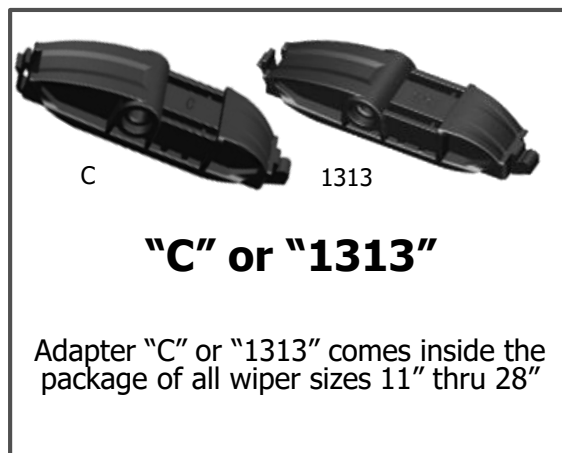

### PART-2 of 2

**3**

Turn at 90 degree angle and insert pin of the arm into the hole on the adapter. Rotate until arm TAB lays flat on the top of the adapter



**4**

Review arm is locked in position.

click



**5**

REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE





# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

OEM ARM  
TYPE



BARDHAHL  
ADAPTER



- 1 Remove pre-installed adapters  
"1311+2012" from wiper  
Press the clip tight to the right, then pull  
up the adapter from the base



- 2 Install adapter "B2" on the base.  
1. Insert the convex into the slot  
2. Press down the adapter until  
it snaps into place



- 3 Unfold the "WINGS"





# UNIVERSAL BEAM BLADE

## Installation Instructions



OEM ARM  
TYPE



**OE-Push  
Button Arm** 16mm

BARDAHL  
ADAPTER



**B2**

Adapter "B2" comes inside the  
package of all wiper sizes  
11" thru 28"

### PART-2 of 2

- 4** Brake-off the "WINGS" and dispose them



- 5** Slide the arm onto the adapter



- 6** Review arm is locked in position.



- 7** REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE






# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

OEM ARM  
TYPE

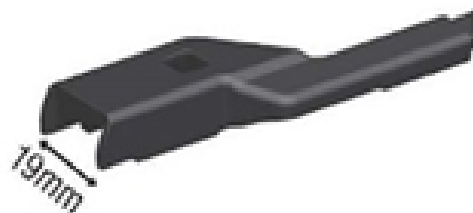

**OE-Push  
Button Arm**

19mm

**1**

Remove pre-installed adapters  
"1311+2012" from wiper

Press the clip tight to the right, then pull  
up the adapter from the base



**2**

Install adapter "B2" on the base.

1. Insert the convex into the slot
2. Press down the adapter until  
it snaps into place



BARDAHL  
ADAPTER



**B2**

Adapter "B2" comes inside the  
package of all wiper sizes  
11" thru 28"



# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-2 of 2

OEM ARM  
TYPE



**OE-Push  
Button Arm**

19mm

**3**

Slide the arm onto the adapter

click



"WINGS" are folded  
on each side

**4**

Review arm is locked in position.

click

click



**5**

REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE



BARDahl  
ADAPTER



**B2**

Adapter "B2" comes inside the  
package of all wiper sizes  
11" thru 28"



# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

OEM ARM  
TYPE



**OE-Pinch  
Tab Arm**

15mm

BARDAHL  
ADAPTER



**B1**

Adapter "B1" comes inside the  
package of all wiper sizes  
11" thru 28"

**1**

Remove pre-installed adapters  
"1311+2012" from wiper

Press the clip tight to the right, then pull  
up the adapter from the base



**2**

Install adapter "B1" on the base.

1. Insert the convex into the slot
2. Press down the adapter until  
it snaps into place






# UNIVERSAL BEAM BLADE

## Installation Instructions



OEM ARM  
TYPE

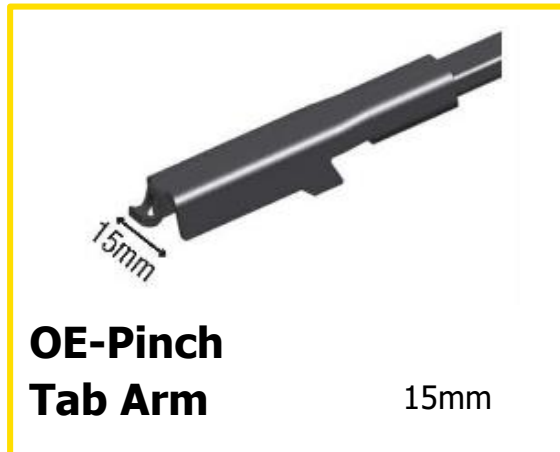

BARDAHL  
ADAPTER



### PART-2 of 2

**3** Install OE Pinch Tab Arm



**4** Review arm is locked in position.



**5** REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE





# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-1 of 2: see more steps in next page...

OEM ARM  
TYPE



**OE-Side Pin  
Flat End Arm** 6mm

BARDHAHL  
ADAPTER



**D**

Adapter "D" comes inside the  
package of all wiper sizes  
11" thru 28"

**1**

Remove pre-installed adapters  
"1311+2012" from wiper

Press the clip tight to the right, then pull  
up the adapter from the base



**2**

Install adapter "D" on the base.  
1. Insert the convex into the slot  
2. Press down the adapter until  
it snaps into place



**3**

Remove the TOP of adapter "D"  
pressing side tabs.





# UNIVERSAL BEAM BLADE

## Installation Instructions



### PART-2 of 2

OEM ARM  
TYPE



**OE-Side Pin  
Flat End Arm** 6mm

BARDAHL  
ADAPTER



**D**

Adapter "D" comes inside the  
package of all wiper sizes  
11" thru 28"

- 4** Insert the arm in the center hole and  
turn to the side



- 5** Reposition the TOP: "ARROWS" need to head  
the same way. Push down & Click in position



- 6** Review arm is locked in position.



- 7** REMOVE PLASTIC COVER FROM  
BLADE BEFORE USE



