



INSTALLATION INSTRUCTIONS

UNIVERSAL BEAM BLADE

WIPERS

**FLAT – FRAMELESS
FOR TRADITIONAL & OEM ARMS**





UNIVERSAL BEAM BLADE

FLAT – FRAMELESS
FOR TRADITIONAL & OEM ARMS




Hook 8x3



Hook 9x3 9x4




Side-Pin 4.8mm

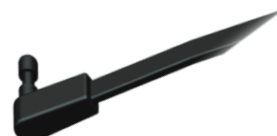

Side-Pin 6.4mm



Pin-In 4.8mm

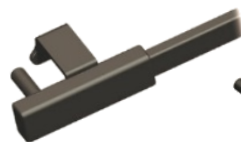

OE-Side Pin
5x17




OE-Side Pin
5x22



OE-Push Button
16mm



OE-Push Button
19mm

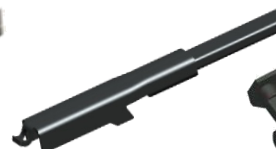

OE-Pinch Tab
15mm



OE-Side Pin
Flat End





Installation Instructions



Bardahl Universal Beam Blade comes with a variety of Adapters to fit Traditional and OEM wiper arms:

TRADITIONAL WIPER ARMS	
Wiper Arm Type	BARD AHL Adapter
Hook 8x3	Adapters 1311 + C6-8 
Hook 9x3 9x4	Adapters 1311 + 2012 (pre-installed) 
Side Pin 3/16" 1/4"	Adapter D 
Pin-in 3/16"	Adapters D + PIN 

OEM WIPER ARMS	
OE Side Pin 5x17 5x22	Adapter C or 1313 
OE Push Button 16mm 19mm	Adapter B2 Wings Unfolded Wings Folded 
OE Pinch Tab 15mm	Adapter B1 
OE Side Pin 6mm	Adapter D 



Installation Instructions



REVOLUTIONARY CLIP SYSTEM

Easy Fit
Super Secure Installation

ATTACH

1. Insert the convex into the slot.
2. Press the clip tight to the right and press down the adapter until it snaps into place.



DE-ATTACH

Press the clip tight to the right, then pull up the adapter from the base.





Summary of Adapters



Universal Beam Blade comes with 08 Adapters in total


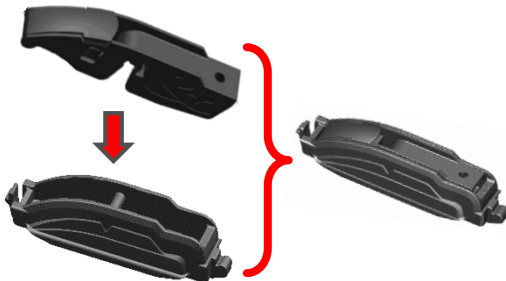




Adapter 1311	Inner Adapter 2012	Adapter C6-8	Adapter PIN
			
Adapter C or 1313	Adapter B1	Adapter B2	Adapter D
 C 1313			





Summary of Adapters

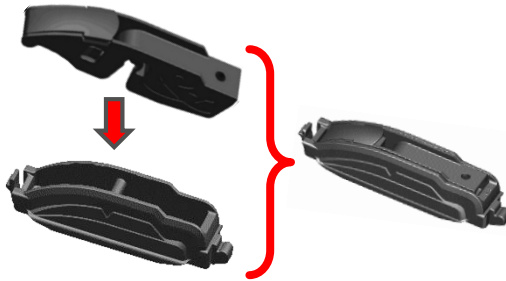


Adapter 1311	NOTE	How it comes in the package
	<p>Adapter "1311" holds Inner Adapter "2012"</p> 	<p>Combo of Adapters "1311+2012" comes pre-installed on wiper</p> 
Inner Adapter 2012	NOTE	How it comes in the package
	<p>Inner Adapter "2012" is pre-installed in adapter "1311"</p> 	<p>Combo of Adapters "2012+1311" comes pre-installed on wiper</p> 



Summary of Adapters



Adapter C6-8

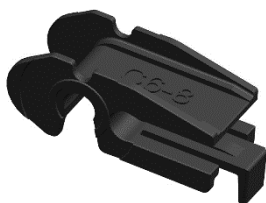

How it comes in the package

Adapter "C6-8" comes inside the wiper package and is packed in a plastic bag with two other adapters



Adapter PIN



How it comes in the package

Adapter "PIN" comes inside the wiper package and is packed in a plastic bag with two other adapters






Summary of Adapters



Adapter C or 1313

How it comes in the package

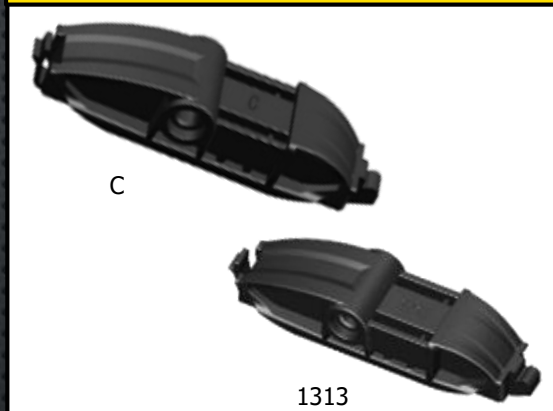

Adapter "C" or "1313" comes inside the wiper package and is packed in a plastic bag with two other adapters



Adapter B1

How it comes in the package









Adapter "B1" comes inside the wiper package and is packed in a plastic bag with two other adapters





Summary of Adapters



Adapter B2	NOTE	How it comes in the package
	<p>Adapter "B2" has WINGS. "B2" is used to install OE-Push Button arms. To install OE-Push Button arm size 19mm: "B2" needs its wings folded. To install OE-Push Button arm size 16mm: need to unfold the "B2" wings, remove and dispose them.</p> <div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div style="text-align: center;">  <p>Wings folded for OE-Push Button arm 19mm</p> </div> <div style="text-align: center;">  <p>Wings unfolded for OE-Push Button arm 16mm</p> </div> </div>	<p>Adapter "B2" comes with WINGS FOLDED inside the wiper package and is packed in a plastic bag with two other adapters</p> 
Adapter D	How it comes in the package	
	<p>Adapter "D" comes inside the wiper package and is packed in a plastic bag with two other adapters</p> 	



UNIVERSAL BEAM BLADE

INSTALLATION TRADITIONAL ARMS




Hook 8x3



Hook 9x3 9x4



Side-Pin 4.8mm

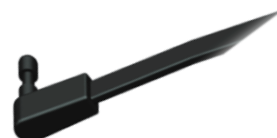

Side-Pin 6.4mm



Pin-In 4.8mm






UNIVERSAL BEAM BLADE

Installation Instructions




TRADITIONAL
ARM TYPE

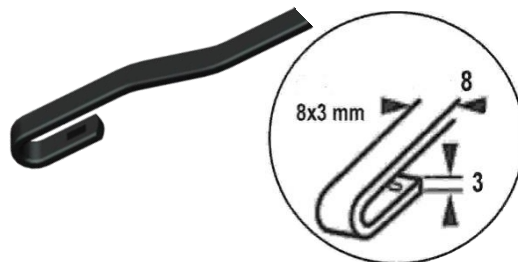

Hook Arm

8mm x 3mm

BARDAHL
ADAPTERS

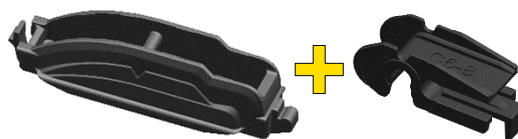

1311

pre-installed


C6-8

Adapter "1311" comes pre-installed on the blade. Adapter "C6-8" comes inside the package of all wiper sizes 11" thru 28"

- 1** Remove pre-installed inner adapter "2012" from adapter "1311"



- 2** Install adapter "C6-8" on adapter "1311". Press down until clicks in position.

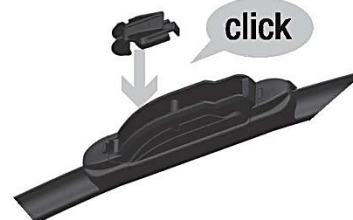

- 3** Install arm & review it is locked in position.



- 4** REMOVE PLASTIC COVER FROM BLADE BEFORE USE






UNIVERSAL BEAM BLADE

Installation Instructions



TRADITIONAL
ARM TYPE

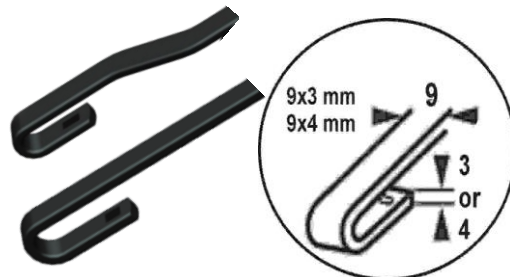

Hook Arms

9 x 3mm
9 x 4mm

BARDAHL
ADAPTERS



**1311+2012 combo
pre-installed**

Adapters "1311+2012" combo
come inside the package of all
wiper sizes 11" thru 28"

- 1** Adapters "1311+2012" come pre-installed



- 2** Open cover & install Hook Arm
9mm x 3mm or 9mm x 4mm



- 3** Click in position & close the cover



- 4** Review arm is locked in position



- 5** REMOVE PLASTIC COVER FROM
BLADE BEFORE USE






UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

TRADITIONAL
ARM TYPE

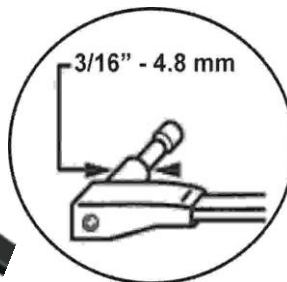

SMALL
Side Pin Arm 3/16" (4.8 mm)

BARDAHL
ADAPTER



D

Adapter "D" comes inside the package
of all wiper sizes 11" thru 28"

1

Remove pre-installed adapters
"1311+2012" from wiper

Press the clip tight to the right, then pull
up the adapter from the base



2

Install adapter "D" on the base
1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place






UNIVERSAL BEAM BLADE

Installation Instructions



PART-2 of 2

TRADITIONAL
ARM TYPE

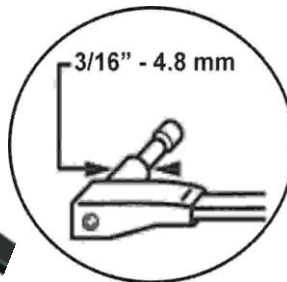

SMALL
Side Pin Arm 3/16" (4.8 mm)

BARDAHL
ADAPTER




D

Adapter "D" comes inside the package
of all wiper sizes 11" thru 28"

3

Remove the TOP of the adapter "D" pressing
side tabs. Install the Side Pin arm using
the appropriate hole.

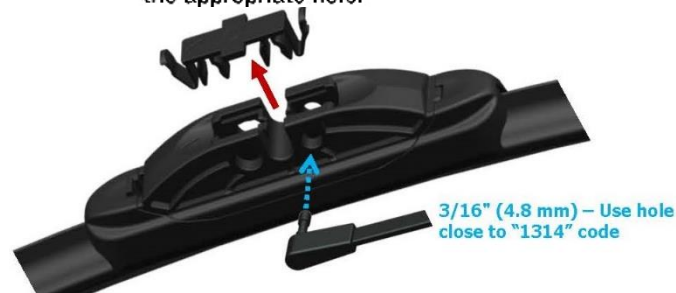

4

Reposition the TOP: "ARROWS" need to head
the same way. Push down & Click in position.
Review arm is locked in position.



5

**REMOVE PLASTIC COVER FROM
BLADE BEFORE USE**






UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

TRADITIONAL
ARM TYPE

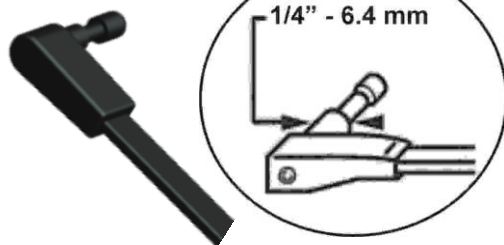

BIG
Side Pin Arm 1/4" (6.4 mm)

BARDAHL
ADAPTER



D

Adapter "D" comes inside the package
of all wiper sizes 11" thru 28"

- 1** Remove pre-installed adapters
"1311+2012" from wiper
Press the clip tight to the right, then pull
up the adapter from the base



- 2** Install adapter "D" on the base
1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place






UNIVERSAL BEAM BLADE

Installation Instructions



PART-2 of 2

TRADITIONAL
ARM TYPE

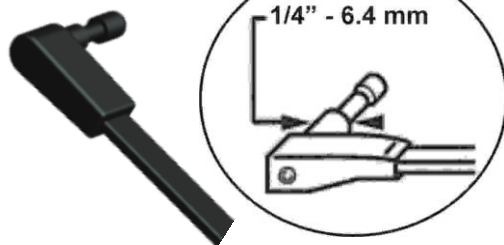

BIG
Side Pin Arm 1/4" (6.4 mm)

BARDHAHL
ADAPTER




D

Adapter "D" comes inside the package
of all wiper sizes 11" thru 28"

3

Remove the TOP of the adapter "D" pressing
side tabs. Install the Side Pin arm using
the appropriate hole.

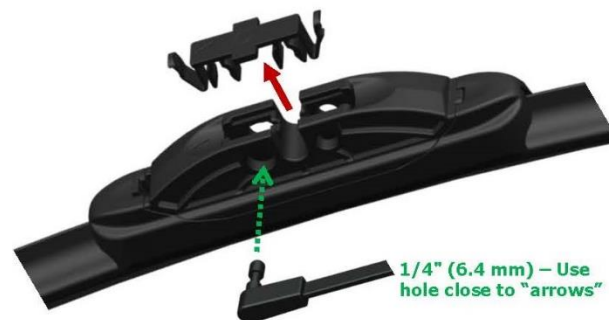

4

Reposition the TOP: "ARROWS" need to head
the same way. Push down & Click in position.
Review arm is locked in position.



5

**REMOVE PLASTIC COVER FROM
BLADE BEFORE USE**






UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 3: see more steps in next page...


TRADITIONAL
ARM TYPE

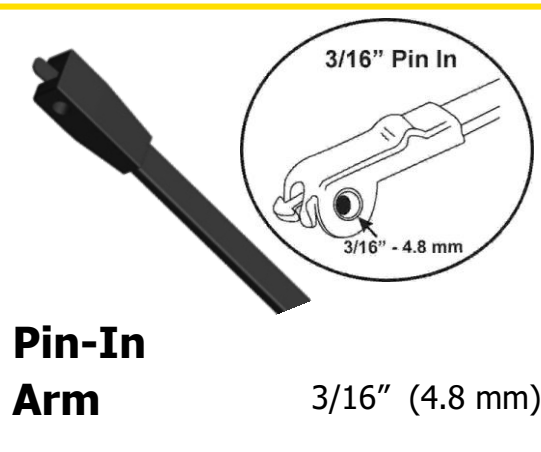

**Pin-In
Arm**

3/16" (4.8 mm)

BARDAHL
ADAPTERS

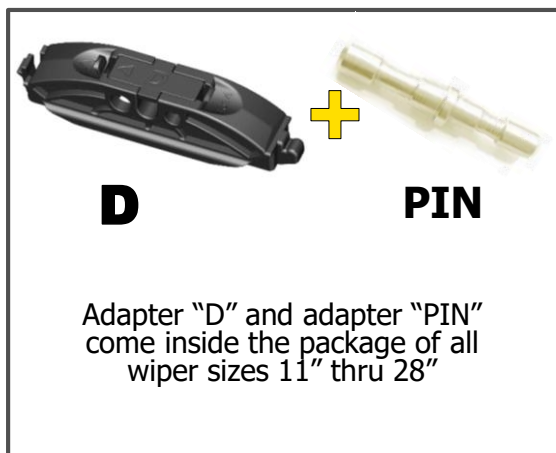

Adapter "D" and adapter "PIN"
come inside the package of all
wiper sizes 11" thru 28"

1

Remove pre-installed adapters
"1311+2012" from wiper

Press the clip tight to the right, then pull
up the adapter from the base



2

Install adapter "D" on the base
1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place





UNIVERSAL BEAM BLADE

Installation Instructions




PART-2 of 3: see more steps in next page...

TRADITIONAL
ARM TYPE



**Pin-In
Arm**

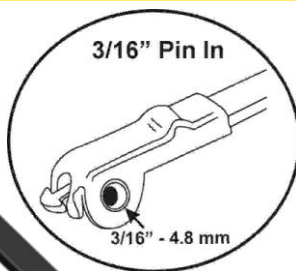

3/16" (4.8 mm)

BARDHAHL
ADAPTERS



D

PIN

Adapter "D" and adapter "PIN"
come inside the package of all
wiper sizes 11" thru 28"

3

Remove the TOP of the adapter "D"
pressing side tabs.



4

Insert the longer side of the PIN in the hole
close to "1314" code. The inserted PIN
should reach all the way to the other side



View from other side:



WRONG: The adapter
PIN is not inserted all
the way through



CORRECT: The adapter
PIN is inserted all
the way through




UNIVERSAL BEAM BLADE

Installation Instructions




PART-3 of 3

TRADITIONAL
ARM TYPE

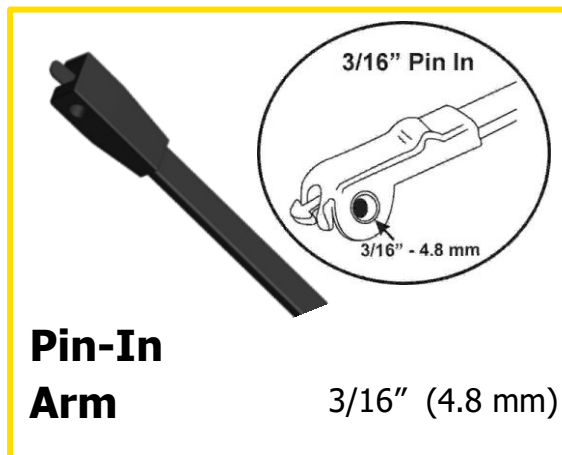

BARDHAHL
ADAPTERS

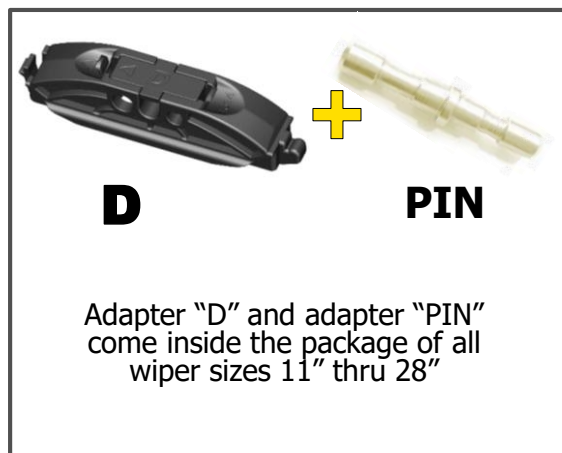

- 5** Reposition the TOP: "ARROWS" need to head the same way. Push down & Click in position. Review pin is secure.



- 6** Install the 3/16" (4.8mm) PIN-IN arm on the PIN adapter. Push & Click in position. Review arm is locked in position.




- 7** REMOVE PLASTIC COVER FROM BLADE BEFORE USE





UNIVERSAL BEAM BLADE

INSTALLATION OEM ARMS

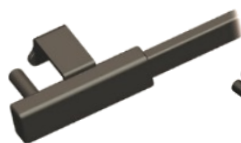

OE-Side Pin
5x17




OE-Side Pin
5x22



OE-Push Button
16mm



OE-Push Button
19mm

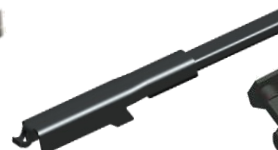

OE-Pinch Tab
15mm



OE-Side Pin
Flat End






UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

OEM ARM
TYPE

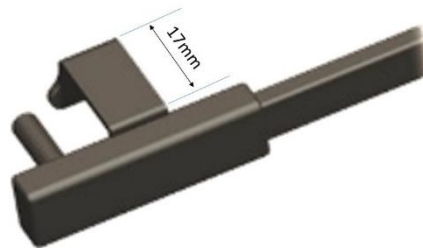

**OE-Side Pin
Arm**

5x**17**mm

BARDAHL
ADAPTER



"C" or "1313"

Adapter "C" or "1313" comes inside the package of all wiper sizes 11" thru 28"
(You can use either adapter "C" or "1313" – they are the same)

1

Remove pre-installed adapters "1311+2012"
Press the clip tight to the right, then pull up the adapter from the base



2

Install adapter "C" or "1313" on the base:
1. Insert the convex into the slot
2. Press down the adapter until it snaps into place





UNIVERSAL BEAM BLADE

Installation Instructions



OEM ARM
TYPE



**OE-Side Pin
Arm**

5x17mm

BARDAHL
ADAPTER



"C" or "1313"

Adapter "C" or "1313" comes inside the package of all wiper sizes 11" thru 28"

PART-2 of 2

- 3** Turn at 90 degree angle and insert pin of the arm into the hole on the adapter. Rotate until arm TAB lays flat on the top of the adapter



- 4** Review arm is locked in position.



- 5** REMOVE PLASTIC COVER FROM BLADE BEFORE USE





UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

OEM ARM
TYPE



**OE-Side Pin
Arm**

5x22mm

BARDAHL
ADAPTER



"C" or "1313"

Adapter "C" or "1313" comes inside the package of all wiper sizes 11" thru 28"
(You can use either adapter "C" or "1313" – they are the same)

1

Remove pre-installed adapters "1311+2012"
Press the clip tight to the right, then pull up the adapter from the base



2

Install adapter "C" or "1313" on the base:
1. Insert the convex into the slot
2. Press down the adapter until it snaps into place





UNIVERSAL BEAM BLADE


Installation Instructions



OEM ARM
TYPE



BARDAHL
ADAPTER

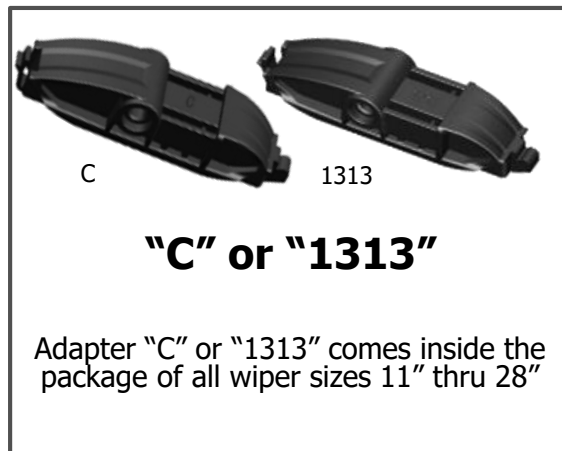

PART-2 of 2

3

Turn at 90 degree angle and insert pin of the arm into the hole on the adapter. Rotate until arm TAB lays flat on the top of the adapter



4

Review arm is locked in position.

click



5

REMOVE PLASTIC COVER FROM
BLADE BEFORE USE





UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

OEM ARM
TYPE



BARDAHL
ADAPTER



- 1 Remove pre-installed adapters
"1311+2012" from wiper
Press the clip tight to the right, then pull
up the adapter from the base



- 2 Install adapter "B2" on the base.
1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place



- 3 Unfold the "WINGS"





UNIVERSAL BEAM BLADE

Installation Instructions



OEM ARM
TYPE



**OE-Push
Button Arm** 16mm

BARDHAHL
ADAPTER



B2

Adapter "B2" comes inside the
package of all wiper sizes
11" thru 28"

PART-2 of 2

- 4** Brake-off the "WINGS" and dispose them



- 5** Slide the arm onto the adapter



- 6** Review arm is locked in position.



- 7** REMOVE PLASTIC COVER FROM
BLADE BEFORE USE






UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

OEM ARM
TYPE

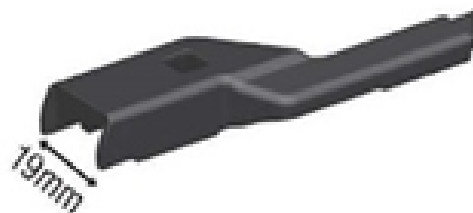

**OE-Push
Button Arm**

19mm

1

Remove pre-installed adapters
"1311+2012" from wiper

Press the clip tight to the right, then pull
up the adapter from the base



2

Install adapter "B2" on the base.

1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place



BARDAHL
ADAPTER



B2

Adapter "B2" comes inside the
package of all wiper sizes
11" thru 28"



UNIVERSAL BEAM BLADE

Installation Instructions



PART-2 of 2

OEM ARM
TYPE



**OE-Push
Button Arm**

19mm

3 Slide the arm onto the adapter



4 Review arm is locked in position.



5 REMOVE PLASTIC COVER FROM
BLADE BEFORE USE



BARDHAHL
ADAPTER



B2

Adapter "B2" comes inside the
package of all wiper sizes
11" thru 28"



UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

OEM ARM
TYPE



**OE-Pinch
Tab Arm**

15mm

BARDAHL
ADAPTER



B1

Adapter "B1" comes inside the
package of all wiper sizes
11" thru 28"

1

Remove pre-installed adapters
"1311+2012" from wiper

Press the clip tight to the right, then pull
up the adapter from the base



2

Install adapter "B1" on the base.

1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place






UNIVERSAL BEAM BLADE

Installation Instructions



PART-2 of 2

OEM ARM
TYPE

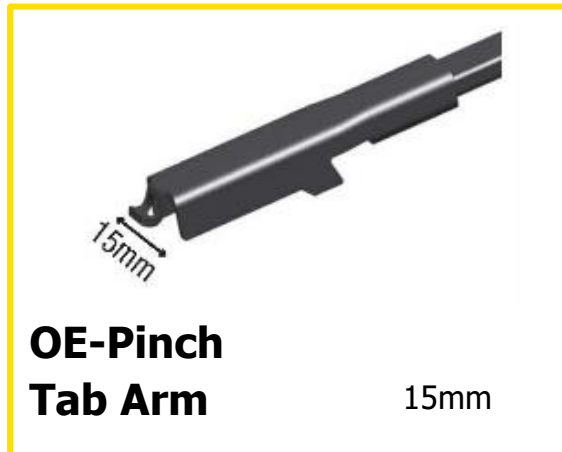

3 Install OE Pinch Tab Arm



4 Review arm is locked in position.



5 REMOVE PLASTIC COVER FROM
BLADE BEFORE USE



BARDAHL
ADAPTER





UNIVERSAL BEAM BLADE

Installation Instructions



PART-1 of 2: see more steps in next page...

OEM ARM
TYPE



**OE-Side Pin
Flat End Arm** 6mm

BARDAHL
ADAPTER



D

Adapter "D" comes inside the
package of all wiper sizes
11" thru 28"

1

Remove pre-installed adapters
"1311+2012" from wiper

Press the clip tight to the right, then pull
up the adapter from the base



2

Install adapter "D" on the base.
1. Insert the convex into the slot
2. Press down the adapter until
it snaps into place



3

Remove the TOP of adapter "D"
pressing side tabs.





UNIVERSAL BEAM BLADE

Installation Instructions



PART-2 of 2

OEM ARM
TYPE



**OE-Side Pin
Flat End Arm** 6mm

BARDAHL
ADAPTER



D

Adapter "D" comes inside the
package of all wiper sizes
11" thru 28"

- 4** Insert the arm in the center hole and
turn to the side



- 5** Reposition the TOP: "ARROWS" need to head
the same way. Push down & Click in position



- 6** Review arm is locked in position.



- 7** REMOVE PLASTIC COVER FROM
BLADE BEFORE USE



